

 
Voting with a Touchscreen Ballot on ClearAccess™

Contest Screen

Touch **Settings** for Magnification, Color/ Contrast, Audio Ballot Playback, and Visual Ballot Display.

Touch the box to the left of the candidate's name to make a selection, touch again to deselect your choice.

Touch the box to the left of the **write-in** option to access the Write-in screen.

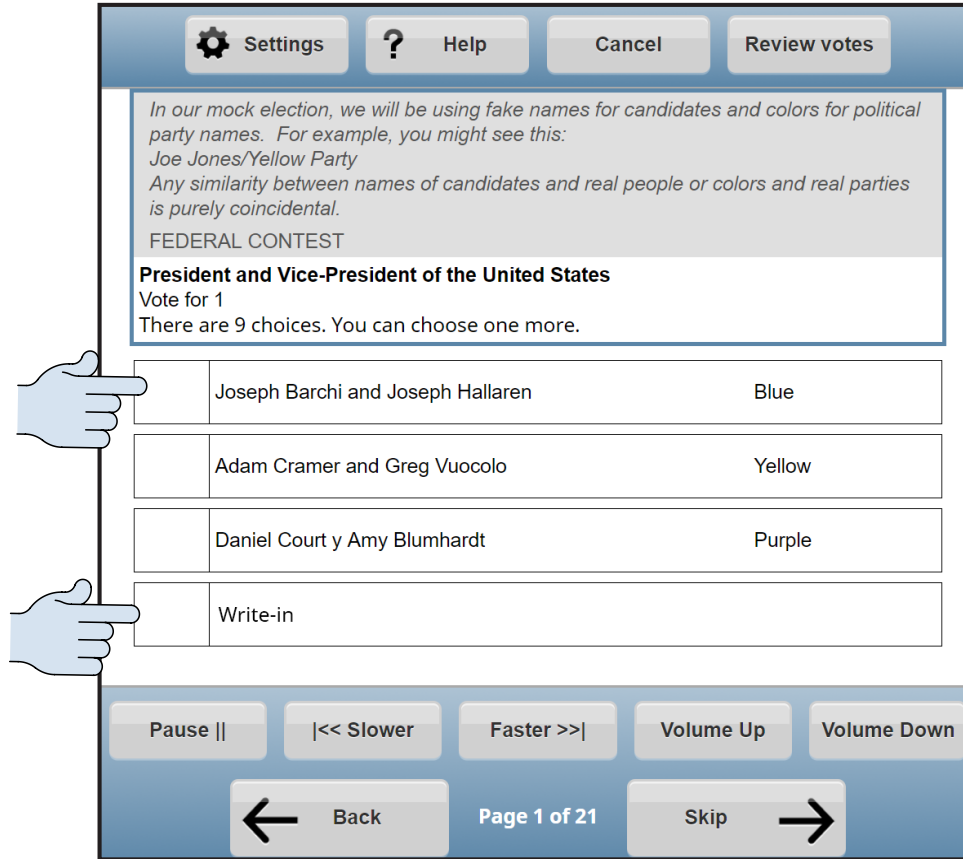

Touch **Help** for voting instructions.

Touch **Cancel** to cancel the voting session.

 
Touch **Review Votes** to view the Review screen.

Touch **Back** to return to the previous screen.

Touch **Next** to go to the next contest.

Write-in Screen


Touch the letters to enter the write-in candidate's name and touch **Accept**.

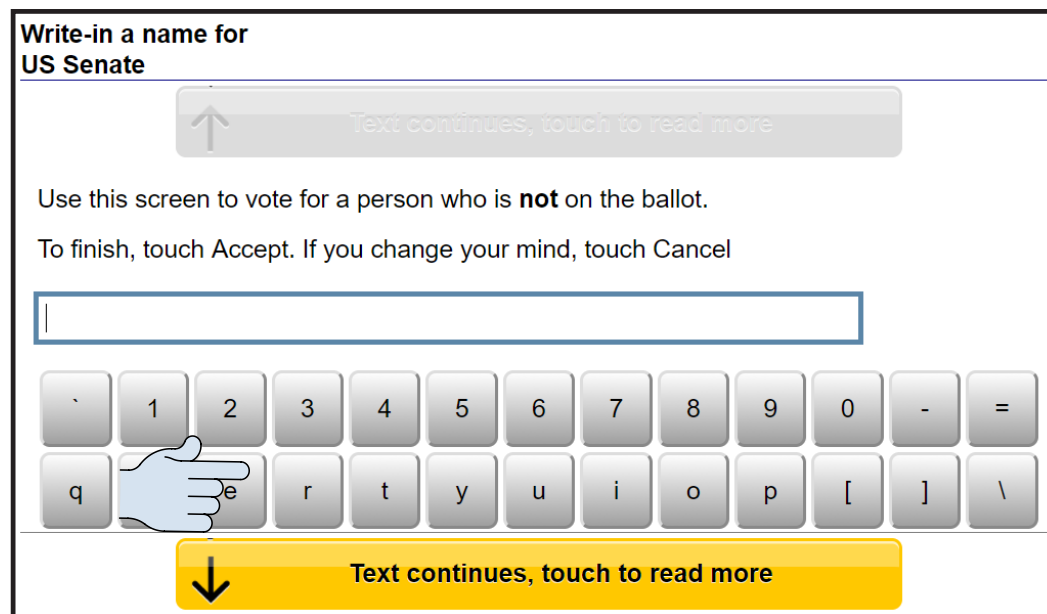

Review Screen

Touch a contest to return to that contest screen to vote or edit the choice.

 Touch to scroll down and see more contests.

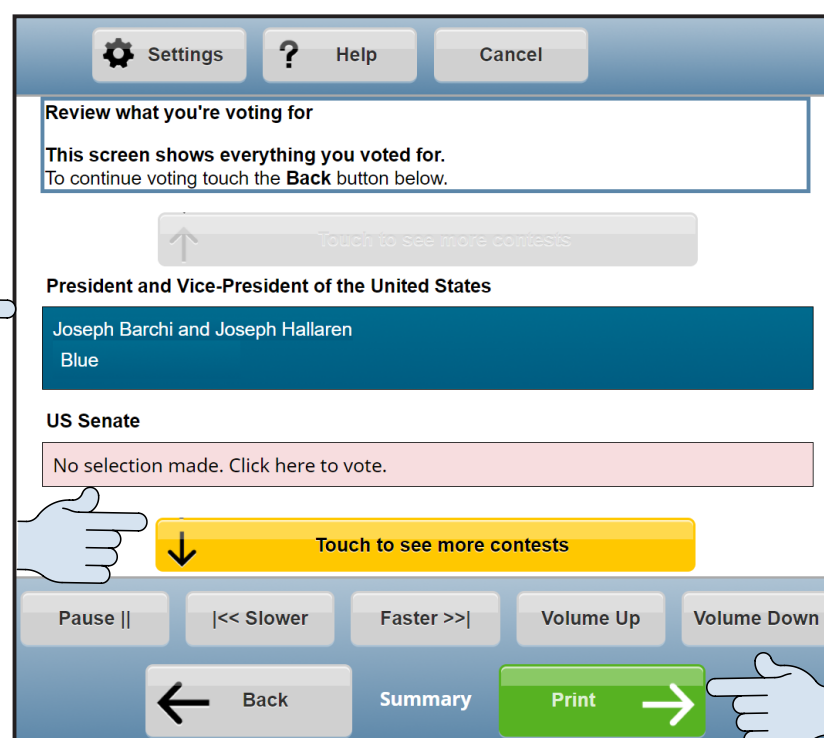

Touch **Print** to print the ballot.

Voting with the Keypad on ClearAccess™

 
Contest Screen




Press to access the **Settings** screen to change Magnification, Color/Contrast, Audio Ballot Playback, and Visual Ballot Display.



Press the up arrow for the previous choice and the down arrow for the next choice.



 Press to select or deselect a choice or to access the **Write-in screen**.

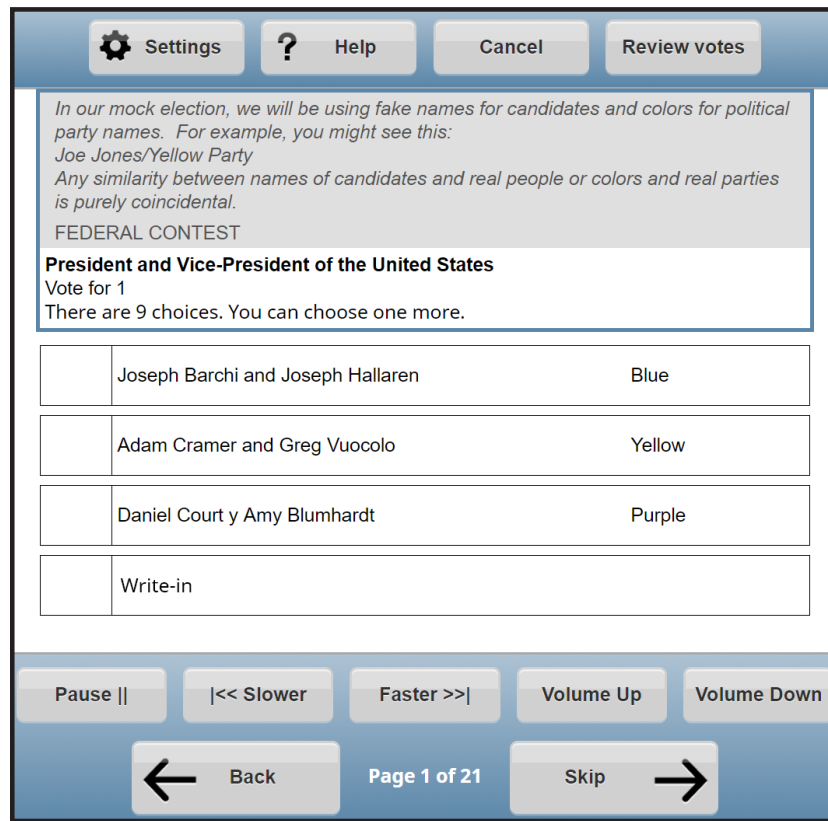

Press to access the **Help** screen for voting instructions.



 
Press to return to the previous contest. Hold for one second to cancel the voting session.



Press to skip to the next contest. Hold for one second to review votes.



Write-in Screen

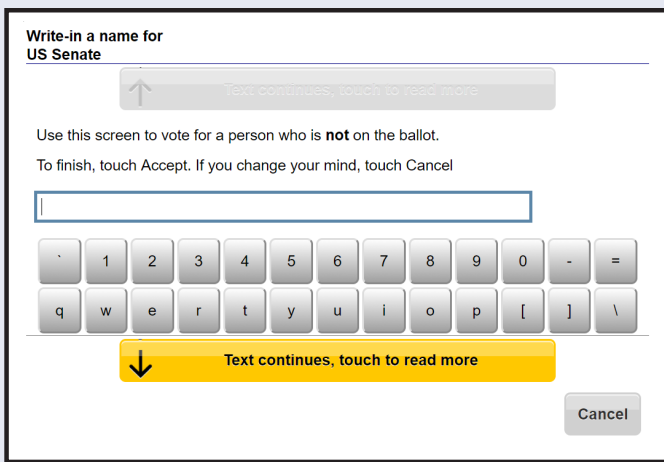

Press to reach a desired character.



Press to accept the character and continue to next character.

 


Press to accept the Write-in choice.


The Shift Key



The shift key changes button behaviors when pressed at the same time as the following:

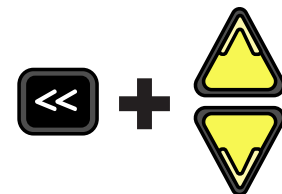

Increases/Decreases volume

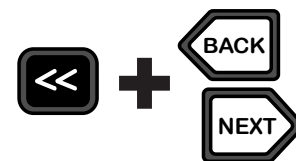 

Increases/Decreases speech playback rate



Pauses/Resumes speech playback

 


Advances to the next sentence



Returns to the previous sentence

Review Screen

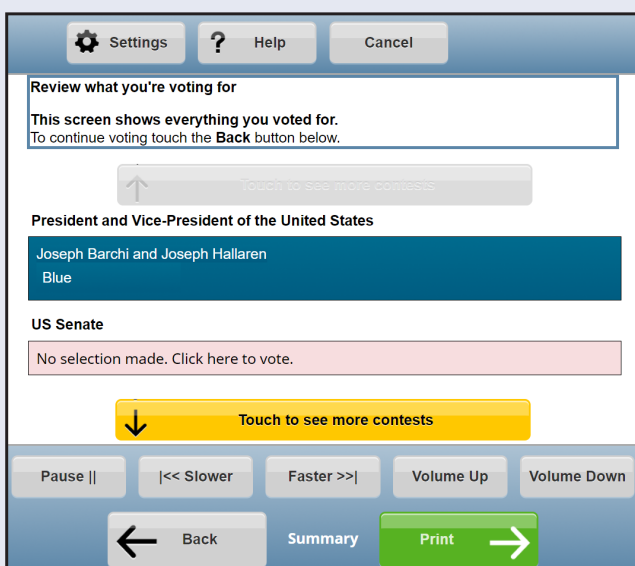

Press to scroll and review votes.



Press to return to the selected contest



Press to **print** ballot

Voting with the Sip and Puff Device on ClearAccess™

Contest Screen

Triple Puff

Access **Settings**:
Magnification, Color/
Contrast, Audio Ballot
Playback, and Visual
Ballot Display.

Single Puff

 
Go to the next choice.

Single Sip

Return to the previous
choice.

Long Puff*

Select or deselect a
choice, or to access the
Write-in screen.

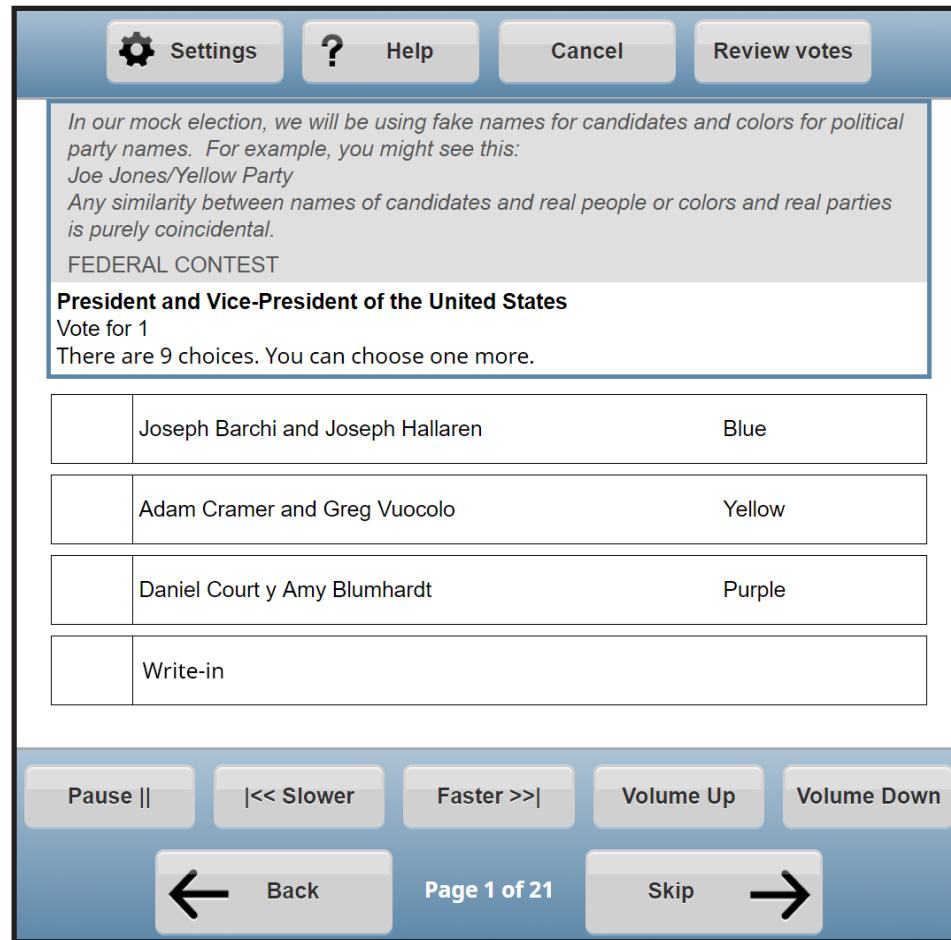

Long Sip*

Access the **Help** screen.

Triple Sip

Cancel the voting
session.

Double Sip

Go to the previous
contest.

Double Puff

Go to the next
contest.

Write-in Screen

Single Puff

 
Scroll through the
characters.

Double Puff


Accept the character
and continue to the
next character.

Long Puff*

Accept the Write-in
candidate's name.

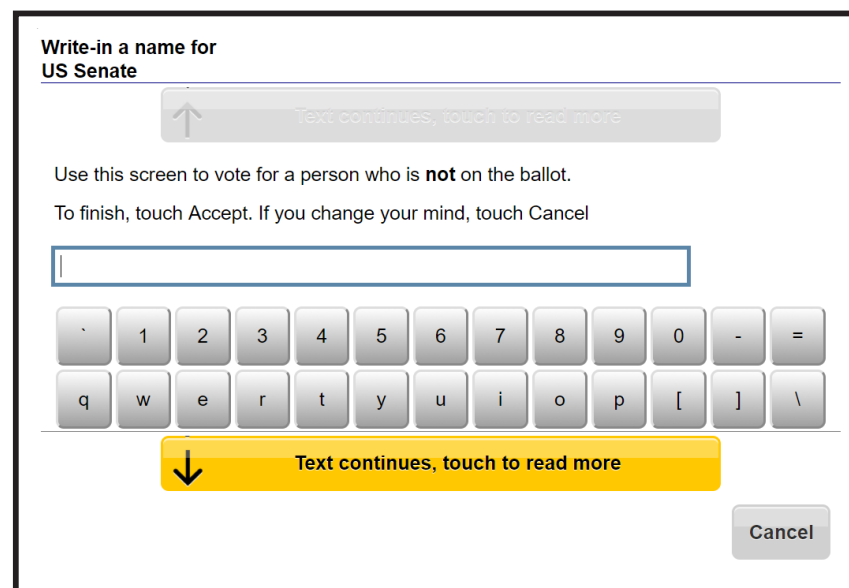

Review Screen

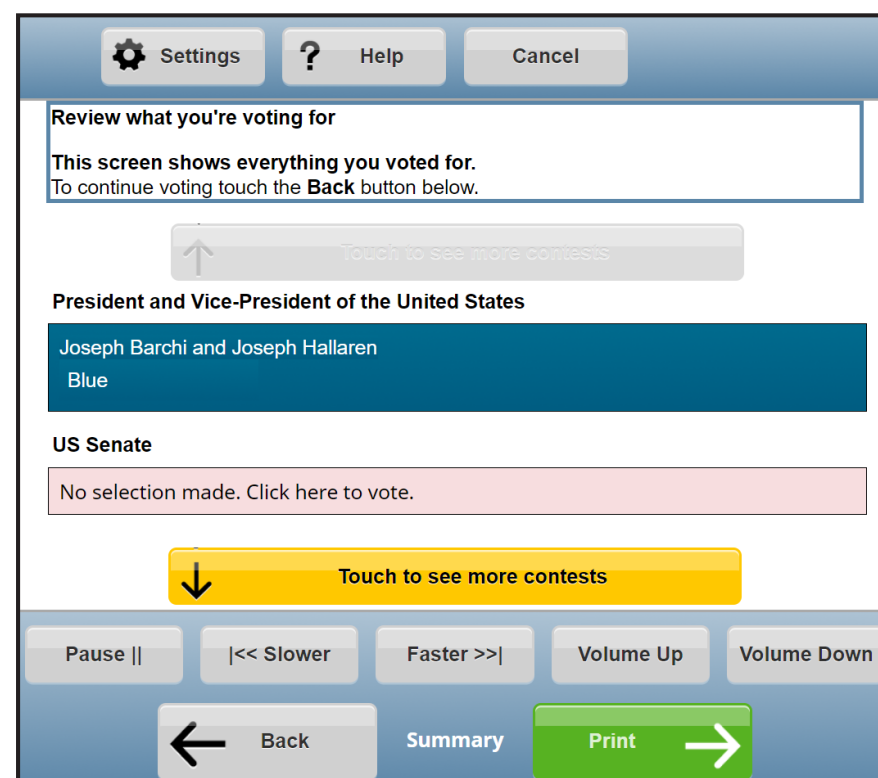 

Single Sip

Advance through the
contest and candidate
list

Long Puff*

Return to the selected
contest on the ballot

Double Puff

Print the ballot

*A long sip or puff is about a half-second long